





ASSA ABLOY

PULLMAN LATCHES KIT

TEMPLATES

PUT TEMPLATE ON THE FRAME'S EDGE


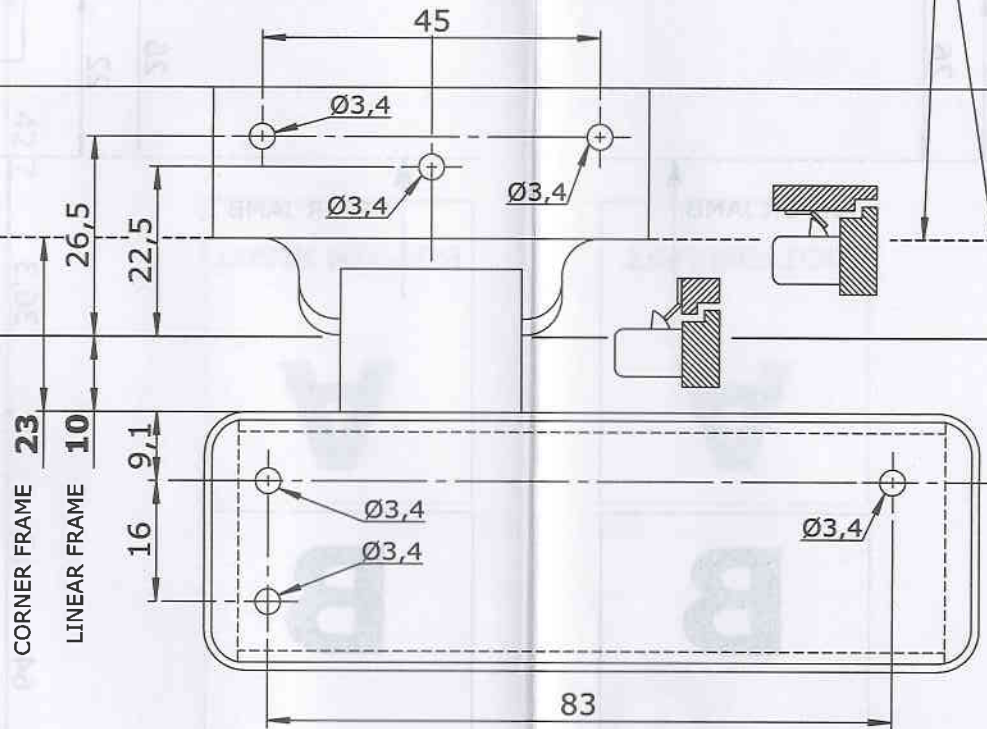




ASSA ABLOY

PULLMAN LATCHES KIT

TEMPLATES

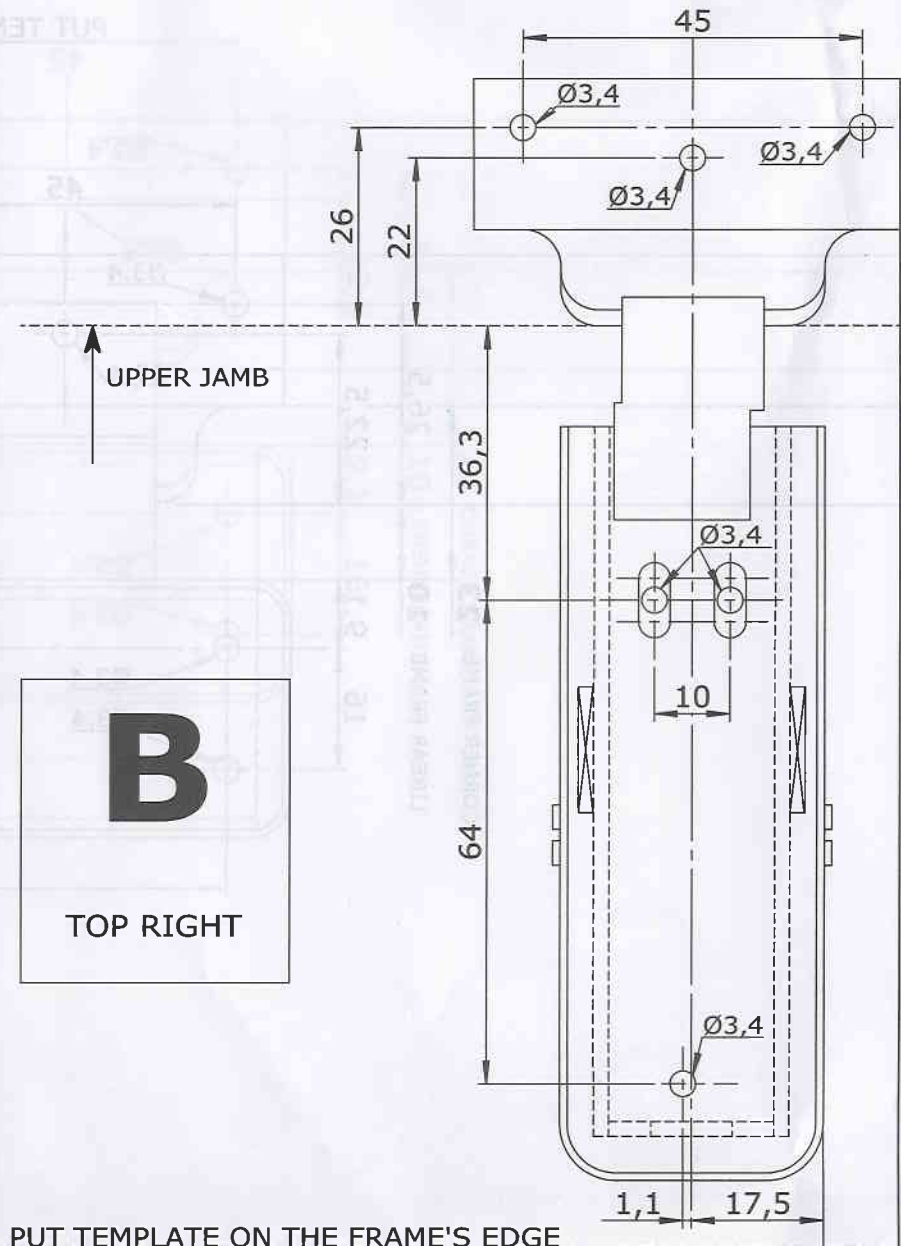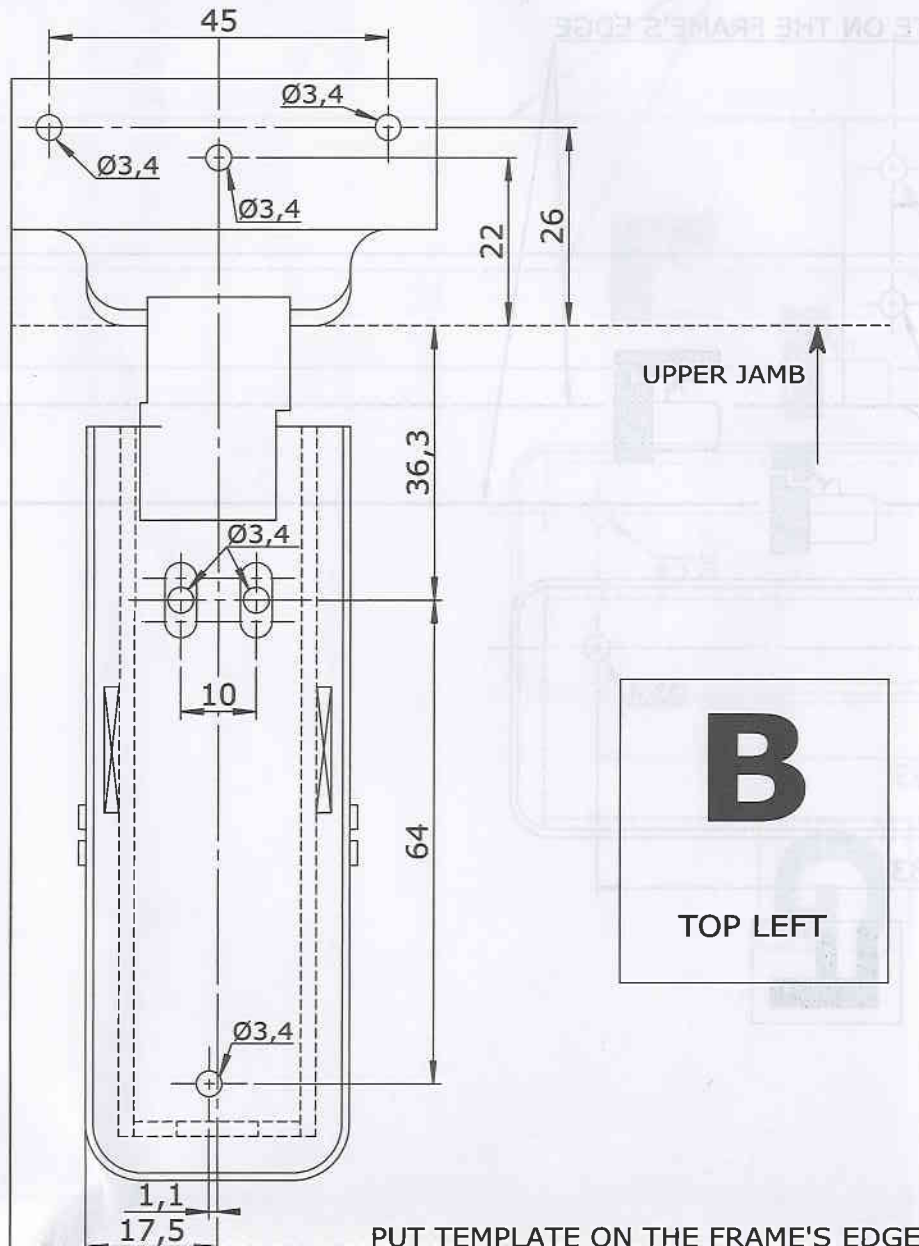

10 LINEAR FRAME

23 CORNER FRAME

17,5 1,1

Ø3.4

64

10

Ø3.4

42,7

A

BOTTOM LEFT

22

Ø6

Ø6

SECTION'S EDGE

LINEAR FRAME 10

CORNER FRAME 23

17,5 1,1

Ø3.4

64

10

Ø3.4

42,7

A

BOTTOM RIGHT

22

Ø6

Ø6

SECTION'S EDGE